 


**Need
Help?**

Visit us at:

[jlabaudio.com/
mp3support/](http://jlabaudio.com/mp3support/)

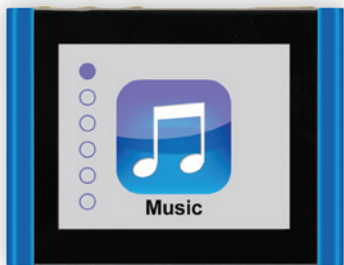

ECLIPSE | **FIT CLIP PLUS**

BY JLAB

MP3 + VIDEO PLAYER

USER MANUAL

CONTENTS

WELCOME	2
CONTACT US	2
NOTES	3
SAFETY & USAGE	4
FEATURES	5
APPEARANCE	6
KEY FUNCTION	7
BASIC OPERATION	8
CONNECTING TO PC	9
MUSIC	12
VIDEO	13
PICTURES	14
RADIO	15
PEDOMETER	16
USER TIPS	17
SETTINGS	18
FCC INFORMATION	20
LIMITED MANUFACTURER'S WARRANTY	21

WELCOME

We love that you are rocking Eclipse by JLab!
We take pride in our products and fully stand behind them.



We're pumped you're joining the JLab family. JLab is passionate about making amazing audio products with incredible sound – offering extra features and quality for your money. If you're already using Eclipse by JLab and loving your products, please share your feedback – via word of mouth, social media or even Amazon or online reviews. Plus our personal service team has your back! We want to #ROCKITOUT with you for life.

–Win Cramer, JLab Audio President

@wincramer

#ROCKITOUT

CONTACT US

Customer Support VIP Help Line:

1-866-358-6640 (Monday - Friday 9:00 AM - 5:00 PM PST)

Or for even faster service, email us at:

service@jlabaudio.com

For tips and how-to videos, visit:

jlabaudio.com/mp3support

NOTES

- 1.** The playback times listed refer to the maximum playback times possible, using the best power savings. The actual playback time may differ as adjustments to screen brightness, power savings modes, volume, etc. are made.
 - 2.** As parameters such as formats, bitrate, codecs, framerates, and resolutions differ, the player will not be compatible with all files of the listed types. If you are experiencing issues playing your files on this player, we recommend using a supported conversion tool to reconvert your file to the specifications of the device.
-

JLab Audio bears no responsibility for any damage or loss of personal data due to misuse of software and/or hardware, damage to the player caused by human factors, replacement of battery, or other unforeseen circumstances. To prevent loss of your data, please backup your data regularly.

Information in the manual is subject to change without notice and is subject to copyright protection. Copying or otherwise reproducing this material without prior written consent is prohibited.

Due to firmware changes, some of the pictures and functions described in this manual may not be the same as are included with your player.

 
SAFETY & USAGE

- Do not use the player in exceptionally cold or hot, dusty, damp or dry environments.
- Do not drop, strike, or throw your player. Physical damage to your player will void ALL warranties.
- Please charge your battery when:
 - > Battery power icon shows an empty icon;
 - > The system automatically shuts down and the power is soon off when you switch on the unit once again;
 - > There is no response if you operate on any key
- Please always follow the correct disconnect procedures for your operating system. Do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading files. Otherwise it may lead to file corruption, firmware failure, and even hardware damage.
- We are not liable for any loss of data stored on this device.
- Please do not dismantle this player. Any disassembly not done by an authorized technician will void ALL warranties.
- Do not listen to your device at high volume for extended periods of time. Doing so can cause permanent hearing loss. Protect yourself by using the lowest volume setting that you can hear comfortably and take frequent breaks by removing your earphones or headphones.

FEATURES

- 1.8" full color LCD screen (resolution: 160x128)
- File transfer: (1) mini-USB
- Memory: 4GB (internal); microSD card slot (removable)
- Supports the following audio formats:
MP3, WMA, APE, and FLAC
- Supports the following image formats:
JPEG, BMP, GIF and PNG
- Supports the following video formats:
AMV

APPEARANCE

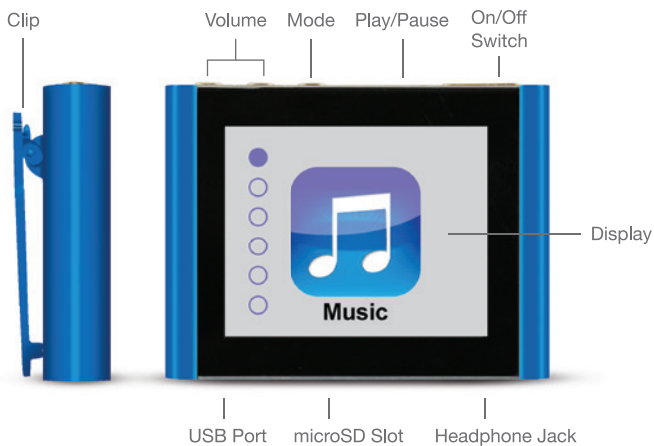

KEY FUNCTION

Menu Browsing

Mode: Press to access the menu or return to the previous level.

- / + : To navigate the menu, press **-** to move down or **+** to move up.

Play/Pause: Press to open a submenu or select an item.

Volume Control

- / + : Press and hold **-** to decrease volume or **+** to increase volume.

BASIC OPERATION

Power On/Off

- To power the player on, set the power switch to the On position.
- To power the player off, set the power switch to the Off position.

Note: If the player is powered off by sliding the power switch to the Off position while the player is still running, all saved settings such as last song played or time settings will be lost.

Note: If the player's screen freezes, restart it by sliding the power switch to the Off position, then back to the On position.

Charging

1. Connect the small end of the supplied mini-USB cable to the mini-USB port.
2. Connect the large end of the cable to a computer.
A connection icon will appear on the display when you connect the device to a computer.

File Storage

 
Your device supports a wide variety of media types, so that you can enjoy your favorite movies, digital images, and music on the move. Your device acts as a removable disk when connected to your computer, which makes transferring files quick and easy.

CONNECTING TO PC

Loading Files: Copy & Paste

Note: This alternate method is used to load videos, pictures, and eBook files as well as audio files.

1. Connect the MP3 player to a working USB port.
2. Go to the My Computer (or This PC if using Windows 10) section of your computer. In there you will find a section called Devices with Removable Storage.
3. Locate the drive created by the unit, generally just called Removable Disk with a letter in parentheses. Drive letters vary depending on your system configuration.

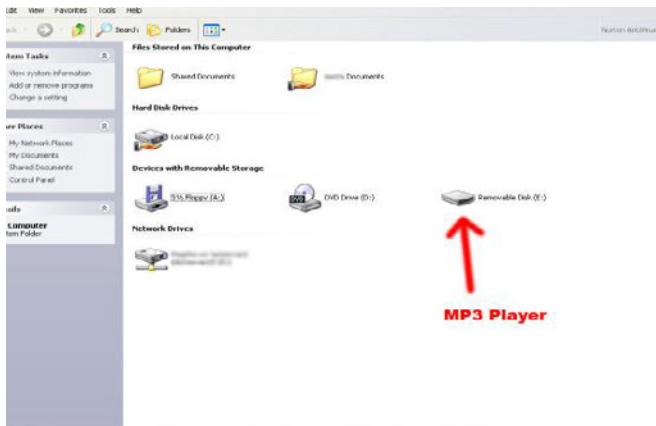

4. Open the drive by either double left clicking on the drive itself, or by right clicking to open the option menu then left clicking on the desired drive.

 


5. Locate the music stored on your computer. Generally this is stored in the My Music folder of your computer.

Note: If you are unable to locate the music on your computer, click on start, search, files and folders, then search for “*.MP3*”.



6. Once you have located the song files, you can right click on the song itself and select Copy. Open the removable disk drive, right click on in the empty space and select Paste. This will transfer the song on to your player.

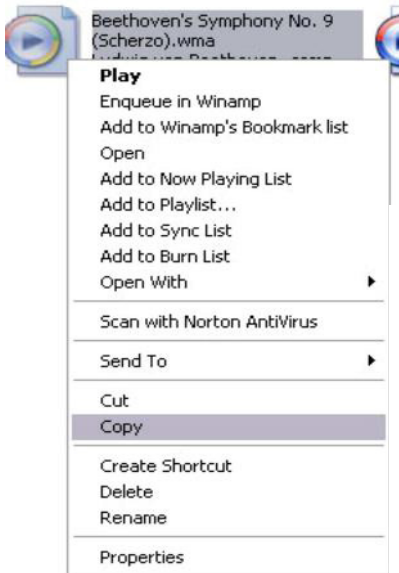

7. Repeat step 6 for as many songs as you want to copy on to the unit.

Note: MAC computers

When connected to your MAC computer, the device will act as a removable drive. Simply drag your files to the device.

MUSIC

Your device allows you to play MP3, WMA, FLAC, and APE music file formats.

Play Music

1. Press Mode to access the main menu.
2. Press – or + until you see the Music menu.
3. Press Play/Pause. The most recent track will begin playing immediately.

Control Music Playback

- To pause or resume playback, press Play/Pause.
- To adjust the volume, press and hold – or +.
- To skip tracks, press – or +.
- To select another album, folder, artist, or genre, press Mode to access the Music menu. Press – or + to highlight a folder, and then press Play/Pause to open the folder. Press – or + to highlight a file, and then press Play/Pause to select the file.
- To change the repeat or equalizer settings, select Repeat or Equalizer from the Music menu. Press – or + to highlight an option, and then press Play/Pause to set it.
- To synchronize music downloaded from your computer, select Organize Music from the Music menu.

VIDEO

Your device allows you to view videos in MP4, AVI, RM, RMVB, FLV, and DAT formats.

Watch Videos

1. Press Mode to access the main menu.
2. Press – or + until you see the Videos menu.
3. Press Play/Pause.
4. Press – or + until Local Folder is highlighted.
5. Press Play/Pause.
6. Press – or + until the appropriate file is highlighted.
7. Press Play/Pause.

Control Video Playback

- Press Play/Pause to pause or resume playback.
- Press – or + to adjust the volume.
- Press Mode to exit.

PICTURES

Your device allows you to view photos in popular file formats.

View Photos

1. Press Mode to access the main menu.
2. Press – or + until you see the Pictures menu.
3. Press Play/Pause.
4. Press – or + until Local Folder is highlighted.
5. Press Play/Pause.
6. Press – or + until the appropriate file is highlighted.
7. Press Play/Pause.
8. Press – or + or skip photos.

Set a Slideshow Option

From the Pictures menu:

1. Press – or + until Playback Set is highlighted.
2. Press Play/Pause.
3. Press – or + to select a slideshow option, and then press Play/Pause to set it.

RADIO

Your device allows you to listen to Normal or Japanese radio bands. You must connect earphones or headphones to pick up radio stations.

Listen to the Radio

1. Press Mode to access the main menu.
2. Press – or + until you see the Radio menu.
3. Press Play/Pause.
4. Press – or + until the appropriate band is highlighted.
5. Press Play/Pause.

Control the Radio

- To change stations, press – or +.
- To adjust the volume, press and hold – or +.
- To scan for available stations automatically, press Mode to access the Radio menu. Press – or + until Auto Search is highlighted, and then press Play/Pause. The radio will scan and save all available stations in your area.
- To save or delete channels, from the Radio menu, press – or + until an option is highlighted. Press Play/Pause to select the option.

PEDOMETER

Your device includes a pedometer to record the time, number of steps, distance, and calories you expend while walking.

Use the Pedometer

1. Press Mode to access the main menu.
2. Press – or + until you see the Pedometer menu.
3. Press Play/Pause.
4. Press – or + until On/Off is highlighted.
5. Press Play/Pause.
6. Press – or + until On is highlighted.

Control the Pedometer

- To view the pedometer, from the Pedometer menu, press – or + until Pedometer is highlighted, and then press Play/Pause.
- To view the pedometer history, from the Pedometer menu, press – or + until History is highlighted, and then press Play/Pause.
- To clear the pedometer history, from the Pedometer menu, press – or + until Clear History is highlighted, and then press Play/Pause.

USER TIPS

Your device includes handy user tips to get the most from your device.

View the User Tips

1. Press Mode to access the main menu.
2. Press – or + until you see the User Tips menu.
3. Press Play/Pause.
4. Press – or + to scroll through the User Tips.

SETTINGS

Note: If the player is powered off by sliding the power switch to the Off position while the player is still running, all saved settings such as last song played or time settings will be lost.

Change Settings

1. Press Mode to access the main menu.
2. Press – or + until you see the Settings menu.
3. Press Play/Pause.
4. Press – or + until the appropriate setting is highlighted, then press Play/Pause to select the setting.
5. Press – or + to change settings and press Mode to advance fields.
6. Press Play/Pause to save the setting.

Available Settings

Date/Time

Set the date and time, and press Mode to save changes.

LCD Set

Set the delay (in seconds) before the screen dims automatically when idle (Auto Dim).

Language

Select to choose different languages available for the player.

Auto Off

Set the delay (in minutes) before the player turns off automatically when idle.

Memory Info

View the percentage of memory that used for media storage.

Firmware Version

View the firmware version.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for Class B Digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or telephone reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED MANUFACTURER'S WARRANTY

1. Eclipse by JLab products carry a one year from date of purchase warranty. This warranty is nontransferable.
2. JLab Audio warrants to the original registered end-user purchaser that Eclipse by JLab products will be free from defects in materials and workmanship for one year from the date of new purchase. During the warranty period, and upon proof of purchase the product will be repaired or replaced (with the same or a similar model, which may be a refurbished model) at JLab Audio option, without charge for either parts or labor. This warranty shall not apply if the product is modified, tampered with, misused, physically damaged, or subjected to abnormal working conditions (including, but not limited to, electrical, fire, and water damage). THIS WARRANTY DOES NOT GUARANTEE YOU UNINTERRUPTED SERVICE. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER.

To obtain service under this warranty, you must contact our Technical department at 1-866-358-6640 to obtain an RMA number. JLab Audio will only replace or repair product that is sent to us with an authorized RMA number.

Return Merchandise Authorization (RMA)

- 1.** Customers will be charged additional for testing and repackaging when returned “bad” items are found to have no problems or defects.
- 2.** Items found to be out-of-warranty or not belonging to JLab Audio will not be replaced. Instead, they will be returned back to the customer freight-collect.
- 3.** RMAs will be shipped back to customer via UPS ground delivery. Express shipping will be at additional costs to the customer.
- 4.** All RMAs must be accompanied with a copy of original receipt or invoice with name, return address and phone number of customer.

Exchanges

- 1.** Items will not be cross-shipped for any reason.
- 2.** The original receipt or invoice must accompany all exchanges.
- 3.** All exchanges must be shipped freight pre-paid by the customer and include a pre-paid shipping label for shipment back to the customer. Furthermore, the customer is expected to insure all items being shipped back. JLab Audio is not responsible for any losses or damages for such equipment.

Discrepancy & Shipping Damage

- 1.** For wrong items, missing items, shipping damage, or other discrepancy; customer should report to RMA department on the day in which the items were received. Any claims after one business day of receipt will not be honored.
- 2.** For any shipping damage, customer must file a claim with their carrier immediately. All items are shipped insured, thus must be reported for coverage.
- 3.** Customer is responsible for paying any freight charge caused by refused shipment or unclaimed goods.
- 4.** JLab Audio will make every reasonable effort to deliver on time however; JLab Audio will not be liable for late or lost shipments.

Consequential Damages & Limitations

- 1.** JLab Audio shall not be liable for any failure to perform or delay in performing any of its obligations when such failure or delay is due to circumstances beyond its reasonable control, including, without limitation, any act of God, war, strike, riot, fire, flood, earthquake, lock-out, late or non-delivery by suppliers, shortage or unavailability of materials, components or transportation facilities, or any act, refusal to act, regulation, order or intervention of any governmental authority.

2. Under no circumstances shall JLab Audio be liable for any special, indirect, incidental or consequential damages of any kind or nature whatsoever, including, without limitation; lost goodwill, lost resale profits, loss of data or software, work stoppage or impairment of other goods, and whether arising out of breach of any express or implied warranty, breach of contract, tort (including negligence), strict product liability or otherwise, even if advised of the possibility of such damage or if such damage could have been reasonably foreseen.